



CTRL-xx GW-BM

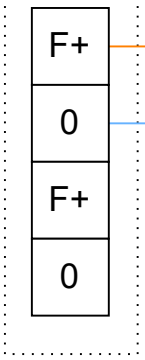

BRSM RKSM


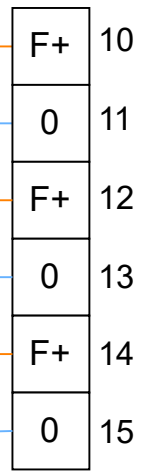


TO / FROM OTHER MODULES

C

BUS/SUPPLY

DAMPER

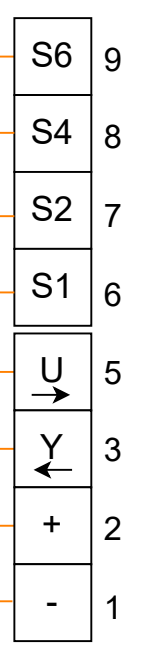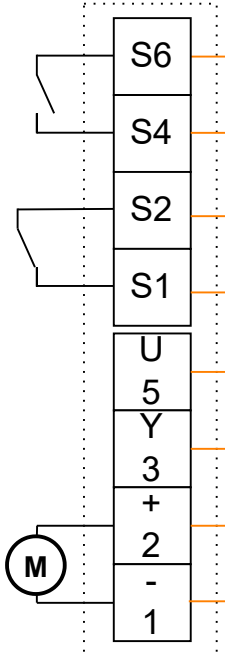

B

Damper input
Normally open (NO)



Damper input
Normally closed (NC)

A

Position and feedback

Supply to damper

PRESSURE / PID

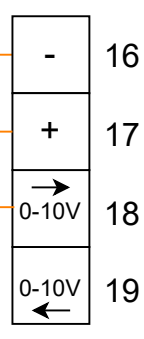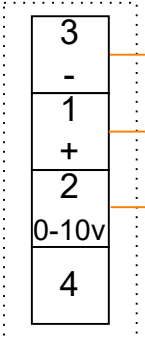

G

Supply pressure
transmitter

0-10V in and out to
slave

